

Environmental Engineering

Civil Engineering

Comprehensive Theory *with* Solved Examples

Civil Services Examination



MADE EASY Publications Pvt. Ltd.

Corporate Office: 44-A/4, Kalu Sarai (Near Hauz Khas Metro Station),

New Delhi-110016 | **Ph. :** 9021300500

E-mail: infomep@madeeasy.in | **Web :** www.madeeasypublications.org

Environmental Engineering

© Copyright, by MADE EASY Publications Pvt. Ltd.

All rights are reserved. No part of this publication may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photo-copying, recording or otherwise), without the prior written permission of the above mentioned publisher of this book.

First Edition : 2019

Reprint : 2020

Reprint : 2021

Second Edition: 2022

Reprint : 2023

Contents

Environmental Engineering

Chapter 1

Water Demand, Water Conveyance and Distribution System1

| | | |
|--------|---|----|
| 1.1 | Water Demand..... | 1 |
| 1.2 | Various Types of Water Demand..... | 1 |
| 1.2.1 | Domestic Water Demand..... | 1 |
| 1.2.2 | Industrial Water Demand..... | 2 |
| 1.2.3 | Institutional and Commercial Water demand . | 2 |
| 1.2.4 | Demand for Public Uses | 3 |
| 1.2.5 | Fire Demand | 3 |
| 1.2.6 | Water Required to Compensate Losses in Thefts and Wastes | 4 |
| 1.3 | Factors Affecting per Capita Demand | 5 |
| 1.3.1 | Size of the City..... | 5 |
| 1.3.2 | Climatic Conditions..... | 5 |
| 1.3.3 | Types of Gentry and Habits of People | 5 |
| 1.3.4 | Industrial and Commercial Activities..... | 5 |
| 1.3.5 | Quality of Water Supplies..... | 6 |
| 1.3.6 | Pressure in the Distribution Systems | 6 |
| 1.3.7 | Development of Sewerage Facilities..... | 6 |
| 1.3.8 | System of Supply..... | 6 |
| 1.3.9 | Cost of Water..... | 6 |
| 1.3.10 | Policy of Metering and Method of Charging ... | 6 |
| 1.4 | Design Period of Water Supply Unit..... | 7 |
| 1.4.1 | Factors Governing the Design Period..... | 7 |
| 1.4.2 | Design Period Values | 8 |
| 1.5 | Population Forecasting..... | 8 |
| 1.5.1 | Population Growth | 8 |
| 1.5.2 | Growth Rate Curve | 9 |
| 1.6 | Population Forecasting Methods..... | 9 |
| 1.6.1 | Arithmetic Increase Method | 10 |
| 1.6.2 | Geometric Increase Method | 11 |
| 1.6.3 | Incremental Increase Method | 12 |
| 1.6.4 | Decreasing Growth Rate Method..... | 14 |
| 1.6.5 | Graphical Projection or Extension Method | 15 |

| | | |
|-------|---|----|
| 1.6.6 | Comparative Graphical Method..... | 16 |
| 1.6.7 | Master Plan or Zoning Method..... | 17 |
| 1.6.8 | Ratio Method or Apportionment Method..... | 17 |
| 1.6.9 | The Logistic Curve Method | 17 |

Chapter 2

Development of Groundwater20

| | | |
|-------|---|----|
| 2.1 | Introduction..... | 20 |
| 2.2 | Movement of Groundwater and its Velocity | 21 |
| 2.3 | Aquifers and Their Types | 22 |
| 2.4 | Infiltration Galleries..... | 25 |
| 2.5 | Wells | 27 |
| 2.5.1 | Open wells or Dug wells..... | 27 |
| 2.5.2 | Tube wells..... | 32 |
| 2.6 | Yield of wells and tubewells by Thiem's equilibrium formulas | 32 |
| 2.6.1 | Thiem's formula for unconfined aquifers (i.e., for water table or gravity wells) | 32 |
| 2.6.2 | Thiem's formula for confined aquifers (i.e., for pressure or artesian wells)..... | 35 |
| 2.6.3 | Limitations of Thiem's Formulae..... | 36 |
| 2.7 | Dupuit's Equilibrium Formulas for Estimating Yield of Wells and Tubewells | 36 |
| 2.7.1 | Dupuit's Formula for unconfined aquifers (Gravity wells) | 37 |
| 2.7.2 | Dupuit's Formula for confined aquifers (Artesian wells)..... | 38 |
| 2.8 | Interference among Wells..... | 39 |
| 2.9 | Specific Capacity of Wells..... | 40 |
| 2.10 | Non-equilibrium Formula for Confined Aquifers (Unsteady radial flow)..... | 46 |

Chapter 3

Water Quality48

| | | |
|-------|---|----|
| 3.1 | Introduction..... | 49 |
| 3.1.1 | Water impurity | 49 |
| 3.2 | Physical Water Quality Parameters | 50 |

| | | |
|--------|---|----|
| 3.2.1 | Suspended solids | 50 |
| 3.2.2 | Turbidity | 51 |
| 3.2.3 | Colour | 53 |
| 3.2.4 | Taste and Odour | 54 |
| 3.2.5 | Temperature | 55 |
| 3.2.6 | Specific conductivity of water | 55 |
| 3.3 | Chemical Water Quality Parameters | 55 |
| 3.3.1 | Total dissolved solids | 55 |
| 3.3.2 | pH value | 56 |
| 3.3.3 | Alkalinity | 57 |
| 3.3.4 | Hardness of water | 63 |
| 3.3.5 | Nitrogen content | 65 |
| 3.3.6 | Chloride content | 66 |
| 3.3.7 | Phosphorus | 66 |
| 3.3.8 | Flourides | 66 |
| 3.3.9 | Metals | 67 |
| 3.3.10 | Dissolved Gases | 70 |
| 3.4 | Presence of Organic | 71 |
| 3.5 | Biological Water Quality Parameter | 72 |
| 3.6 | Water Borne Diseases | 75 |
| 3.7 | Indian Standards for Drinking Water | 77 |

Chapter 4

Treatment of Water.....78

| | | |
|-------|--|-----|
| 4.1 | Introduction | 78 |
| 4.2 | Methods of Purification of Work | 78 |
| 4.3 | Pre-Treatment | 81 |
| 4.4 | Plain Sedimentation (Type-I Settling) | 85 |
| 4.4.1 | Theory of Sedimentation | 85 |
| 4.4.2 | Sedimentation tank, its types and its design | 90 |
| 4.5 | Sedimentation Aided with Coagulation | 103 |
| 4.5.1 | Mechanism of coagulation | 104 |
| 4.5.2 | Mixing device | 111 |
| 4.5.3 | Flash Mixture | 112 |
| 4.6 | Filtration | 114 |
| 4.6.1 | Theory of Filtration | 115 |
| 4.6.2 | Filter materials | 115 |
| 4.7 | Slow Sand Filters | 116 |
| 4.7.1 | Construction | 116 |
| 4.7.2 | Operation and cleaning | 118 |
| 4.7.3 | Rate of Filtration | 119 |
| 4.7.4 | Efficiency and performance of slow sand filters | 119 |
| 4.8 | Rapid Sand Filter | 120 |
| 4.8.1 | Construction of rapid gravity filters | 120 |

| | | |
|--------|--|-----|
| 4.8.2 | Working and cleaning of rapid gravity filters | 123 |
| 4.8.3 | Operational troubles in rapid gravity filters | 125 |
| 4.8.4 | Rate of Filtration | 126 |
| 4.8.5 | Efficiency and performance | 126 |
| 4.9 | Comparison between Slow and Rapid Sand Filter | 132 |
| 4.10 | Disinfection | 133 |
| 4.11 | Chlorination | 133 |
| 4.12 | Minor Methods of Disinfection | 144 |
| 4.13 | Water Softening | 146 |
| 4.13.1 | Methods of removing temporary hardness | 146 |
| 4.13.2 | Methods of removing permanent hardness | 147 |
| 4.14 | Miscellaneous Treatments | 165 |
| 4.14.1 | Fluoridation and defluoridation | 165 |

Chapter 5

Water Conveyance and

Distribution System.....167

| | | |
|--------|--|-----|
| 5.1 | Introduction | 167 |
| 5.2 | Conduits for Water Supply | 167 |
| 5.3 | Calculation of Head Loss Caused by Pipe Friction | 168 |
| 5.4 | Forces Acting on Pressure Conduits | 172 |
| 5.4.1 | Water Hammer Pressure | 172 |
| 5.4.2 | Computations of Water Hammer Pressure | 173 |
| 5.5 | Types of Pipe | 176 |
| 5.6 | Joints in Water Supply Piping | 180 |
| 5.7 | Corrosion in Pipes (Metal) | 182 |
| 5.7.1 | Corrosion Control | 183 |
| 5.8 | Pipe Appurtenances | 184 |
| 5.7.1 | Testing of the Pipe Lines | 188 |
| 5.8.2 | Economical Diameter of the Pumping Mains | 189 |
| 5.9 | Water Distribution System | 190 |
| 5.10 | Methods of Distribution | 191 |
| 5.10.1 | Gravitational System | 191 |
| 5.10.2 | Direct Pumping | 191 |
| 5.10.3 | Combined System | 191 |
| 5.11 | Systems of Supply | 191 |
| 5.11.1 | Continuous Supply | 191 |
| 5.11.2 | Intermittent supply | 191 |
| 5.12 | Layouts of Distribution System | 192 |
| 5.13 | Analysis of Networks of Pipes | 195 |
| 5.13.1 | Equivalent Pipe Method | 195 |
| 5.13.2 | Hardy Cross Method | 195 |

| | | |
|--------|---|-----|
| 5.13.3 | Appurtenances in Plumbing System | 198 |
| 5.13.4 | Water Supply System Plumbing | 199 |
| 5.13.5 | Service Connection | 200 |
| 5.14 | Storage Capacity of Distribution Reservoirs | 201 |

Chapter 6

Wastewater Characteristics217

| | | |
|-------|--|-----|
| 6.1 | Introduction..... | 217 |
| 6.2 | Characteristics of Sewage..... | 217 |
| 6.2.1 | Physical characteristics of sewage and their testing..... | 217 |
| 6.2.2 | Chemical characteristics of sewage | 219 |
| 6.3 | Population Equivalent..... | 231 |
| 6.4 | Ratios | 232 |
| 6.4.1 | $\frac{BOD}{COD}$ Ratio | 232 |
| 6.4.2 | $\frac{COD}{TOC}$ Ratio | 232 |
| 6.5 | Disposal of Wastewater..... | 235 |
| 6.5.1 | Disposal by Dilution..... | 235 |
| 6.5.2 | Disposal of Wastewater on Land | 238 |

Chapter 7

Design of Sewer239

| | | |
|--------|---|-----|
| 7.1 | Introduction..... | 239 |
| 7.2 | Types of Sewer in a Typical Collection System | 239 |
| 7.3 | Testing of the Sewer Pipes..... | 240 |
| 7.3.1 | Test for Leakage called Water Test | 240 |
| 7.3.2 | Test for Straightness of Alignment and Obstruction | 240 |
| 7.3.3 | By Air Test..... | 240 |
| 7.4 | Types of Collection System..... | 241 |
| 7.4.1 | Sanitary Sewer | 241 |
| 7.4.2 | Storm Sewer..... | 242 |
| 7.4.3 | Combined Sewer System | 242 |
| 7.5 | Assumptions in Sewer Design..... | 243 |
| 7.6 | Design Data..... | 244 |
| 7.7 | Maximum Velocity | 245 |
| 7.8 | Equal Degree of Self Cleaning..... | 248 |
| 7.8.1 | Shield's expression for self-cleansing velocity | 248 |
| 7.9 | Egg Shaped Sewer..... | 250 |
| 7.10 | Storm Water Drainage..... | 251 |
| 7.10.1 | Computing the peak drainage discharge by the use of Rational Formula | 251 |
| 7.10.2 | Rational Formula..... | 252 |

Chapter 8

Treatment of Sewage265

| | | |
|-------|---|-----|
| 8.1 | Introduction..... | 265 |
| 8.2 | Treatment Methods | 265 |
| 8.2.1 | Unit Operations | 265 |
| 8.2.2 | Unit Process..... | 265 |
| 8.3 | Preliminary Treatment..... | 272 |
| 8.3.1 | Screening | 273 |
| 8.3.2 | Comminutors..... | 277 |
| 8.3.3 | Grit Removal Basins..... | 277 |
| 8.3.4 | Grit chamber or Grit channel | 281 |
| 8.3.5 | Detritus Tanks..... | 286 |
| 8.3.6 | Tanks for removing oil and grease | 287 |
| 8.4 | Primary Treatment | 288 |
| 8.4.1 | Sedimentation | 288 |
| 8.4.2 | Types of Settling..... | 289 |
| 8.5 | Secondary Treatment of Sewage | 294 |
| 8.5.1 | Secondary Treatment Through Biological Filtration of Sewage | 294 |
| 8.5.2 | Contact Beds for Biological Filtration of Sewage | 294 |
| 8.5.3 | Intermittent Sand Filters for Biological Filtration of Sewage..... | 295 |
| 8.5.4 | Trickling Filters for Biological Filtration of Sewage : (Attached Growth System) | 296 |
| 8.5.5 | Secondary treatment through activated sludge process..... | 309 |
| 8.6 | Aerobic Stabilization Units | 333 |
| 8.6.1 | Oxidation Ponds and Stabilization Ponds.... | 333 |
| 8.6.2 | Design Parameter for Oxidation Pond | 335 |
| 8.6.3 | Use of Lagoons for Disposal of Raw Sludge | 338 |
| 8.6.4 | Aerated Lagoons..... | 339 |
| 8.7 | Anaerobic Stabilisation Units | 345 |
| 8.7.1 | Anaerobic and Facultative Stabilisation Ponds | 345 |
| 8.7.2 | Septic Tanks..... | 345 |
| 8.7.3 | Imhoff Tank..... | 356 |
| 8.8 | Digestion and Disposal of Primary and Secondary Sludge..... | 358 |
| 8.8.1 | Sludge Sources, Characteristics and Quantities | 358 |
| 8.8.2 | Sludge Treatment Processes | 358 |
| 8.8.3 | Constituents..... | 360 |
| 8.8.4 | Sludge Digestion Process..... | 363 |
| 8.8.5 | Stages of the Sludge Digestion Process | 365 |

| | | |
|--------|---|-----|
| 8.8.6 | Factors affecting Sludge Digestion and their Control..... | 366 |
| 8.9 | Sludge Digestion Tank or Digesters | 367 |
| 8.9.1 | Constructional Details..... | 367 |
| 8.9.2 | Design Consideration..... | 368 |
| 8.9.3 | High Rate Digesters..... | 369 |
| 8.9.4 | Two Stage Sludge Digesters | 369 |
| 8.10 | Dewatering Disposal of Digested Sludge | 376 |
| 8.10.1 | Objective and Process Selection | 376 |
| 8.10.2 | Disposal of Dewatered Sludge..... | 378 |

Chapter 9

Solid Waste Management381

| | | |
|-------|--|-----|
| 9.1 | Introduction..... | 381 |
| 9.2 | Types of Solid Wastes | 381 |
| 9.2.1 | Municipal Solid Wastes | 381 |
| 9.2.2 | Industrial Solid Waste | 383 |
| 9.3 | Functional Element of Solid Waste Management... .. | 383 |
| 9.3.1 | Factors affecting waste generation rate..... | 384 |
| 9.3.2 | On-site handling storage and processing.... | 384 |
| 9.3.3 | Collection of solid wastes | 385 |
| 9.3.4 | Transfer and Transport | 385 |
| 9.3.5 | Processing Techniques..... | 386 |
| 9.3.6 | Disposal of Municipal Solid Waste | 387 |
| 9.4 | Storage, Transportation and Disposal of Industrial Solid Wastes | 394 |
| 9.5 | Disposal of Environmentally Hazardous Biomedical, Radioactive Wastes | 395 |
| 9.5.1 | Disposal of Biomedical Wastes..... | 395 |
| 9.5.2 | Chemical Disinfection | 395 |
| 9.5.3 | Disposal of Radioactive Wastes..... | 396 |

Chapter 10

Pollution405

A. Air Pollution

| | | |
|--------|---|-----|
| 10.1 | Source and Classification of Air Pollutants | 405 |
| 10.1.1 | Air Contaminants | 406 |
| 10.1.2 | Natural Contaminants | 406 |
| 10.2 | Gases | 407 |
| 10.3 | Primary and Secondary Air Pollutants..... | 409 |
| 10.4 | Effects of Air Pollution..... | 410 |
| 10.4.1 | Effects of Air Pollution on Human Health | 410 |
| 10.4.2 | Effects of Air Pollution on Plants | 411 |

| | | |
|---------|---|-----|
| 10.4.3 | Effects of Air-pollutants on Live Stock Animals..... | 411 |
| 10.4.4 | Effects of Air Pollutant on Materials and Services..... | 412 |
| 10.4.5 | Effects of Air Pollutant on Aquatic Life..... | 412 |
| 10.4.6 | Effects of Air Pollutant on Global and Regional Environment | 412 |
| 10.5 | Photochemical Air Pollution | 412 |
| 10.5.1 | Nitrogen Dioxide Photochemical Reaction | 412 |
| 10.5.2 | Sulphur Dioxide Photochemical Reaction... | 413 |
| 10.5.3 | Aldehyde Photochemical Reaction | 413 |
| 10.6 | Photochemical Smog | 413 |
| 10.7 | Composition and Structure of the Atmosphere..... | 413 |
| 10.8 | Acid Rain | 413 |
| 10.9 | Global Warming..... | 414 |
| 10.10 | Ozone Layer Depletion | 416 |
| 10.11 | Meteorology and Natural Purification Process..... | 416 |
| 10.12 | Elemental Properties of the Atmosphere..... | 416 |
| 10.13 | Control of Air Pollution..... | 419 |
| 10.13.1 | Natural Self Cleansing Properties of the Environment | 419 |
| 10.13.2 | Engineered System | 419 |
| 10.14 | Control Devices for Particulates..... | 420 |
| 10.15 | Control Devices for Gaseous Pollutants..... | 429 |
| 10.15.1 | Adsorption Unit..... | 429 |
| 10.15.2 | Absorption Units..... | 430 |
| 10.15.3 | Condensation Units | 432 |
| 10.15.4 | Combustion Unit | 433 |
| 10.16 | Automotive Emission Control | 435 |
| 10.17 | Dispersion of Air Pollutants into the Atmosphere .. | 436 |
| 10.18 | Negative Lapse Rate and Inversion | 438 |
| 10.18.1 | Radiation Inversion..... | 438 |
| 10.18.2 | Subsidence Inversion..... | 438 |
| 10.19 | Impact of Winds on Dispersion of Pollutants..... | 439 |
| 10.20 | Plume Behaviour | 440 |
| 10.21 | Design of Stack Height | 442 |

B. Environmental Impact Assessment

(for Thermal Power Plants, Mines, River Valley Projects)

| | | |
|---------|--|-----|
| 10.22 | Environmental Impact of Thermal Power Plants | 450 |
| 10.23 | Environmental Impact of Mining | 451 |
| 10.24 | Environmental Impact of River Valley Projects..... | 453 |
| 10.24.1 | Negative impact..... | 454 |
| 10.24.2 | Positive impact | 455 |
| 10.24.3 | Conclusion | 455 |
| 10.25 | Pollution Control Act..... | 456 |



Water Demand, Water Conveyance and Distribution System

1.1 WATER DEMAND

Estimation of demand for water is the key parameter in planning a water supply scheme. In fact, the first study is to consider the demand and then the second requirement is to find sources to fulfil that demand. In this chapter, we are going to understand the duty of an engineer in designing a water supply scheme for a community.

To design a water supply, we must first estimate the population for which the scheme should be designed. The scheme once installed must cater for the demand of the projected population upto some predetermined future date.

1.2 VARIOUS TYPES OF WATER DEMAND

- The prediction of precise quantity of water demanded by the public is very difficult, because there are so many variable factors affecting water consumption.
- There are some certain thumb rules and empirical formulas, which are used to assess this quantity, which may give fairly accurate results.

There are different types of water demands:

1.2.1 Domestic Water Demand

Domestic water demand includes the water required in private building for drinking, cooking, bathing, gardening purposes etc. which may vary according to the living conditions of the consumers.

- The total domestic water consumption is near about 50 to 60% of the total water consumptions.
- The IS code caps a limit on domestic water consumption between 135 to 225 litre per capita per day (lpcd).
- As per IS code, the minimum domestic water demand under ordinary conditions for a town with full flushing system should be taken as 200 lpcd although it can be minimized upto 135 lpcd for economically weaker section and LIG colonies (low income group) depending upon prevailing conditions.



In developed and an efficient country like USA, this figure usually goes as high as 340 lpcd. This is because more water is consumed in rich living, in air-conditioning, air-cooling, bathing in bath tube, dish washing of utensils, car washing, home laundries, garbage grinders, etc.

1.2.2 Industrial Water Demand

The industrial water demand expresses the water required for industries which are either existing or likely to be started in future, in the city for which water supply is being planned.

- This water requirement will thus vary with the types and number of industries present in the city.
- In industrial cities, the per capita requirement may finally be computed to be as high as 450 lpcd as compared to the normal industrial requirement of 50 lpcd.

Table: Water Requirements for Commercial Buildings (as per IS code)

| S.No. | Type of building | Average consumption in (lpcd) |
|-------|---|-------------------------------|
| 1. | Factories | |
| | (a) Where bathrooms are required to be provided | 45 |
| | (b) Where no bathrooms are required | 30 |
| 2. | Hospitals (Including laundry, per bed) | |
| | (a) Number of beds less than 100 | 340 |
| | (b) Number of beds exceeding 100 | 450 |
| 3. | Nurses homes and medical quarters | 150 |
| 4. | Hostels | 135 |
| 5. | Hotels (per bed) | 180 |
| 6. | Restaurants (per seat) | 70 |
| 7. | Offices | 45 |
| 8. | Cinemas, auditoriums and theatres (per seat) | 15 |
| 9. | Schools | |
| | (a) Day scholars | 45 |
| | (b) Residentials | 135 |

Table: Water Required by Certain Important Industries

| Name of Industry | Unit of Production | Approximate Quantity of Water required per unit of production/raw material in kilo litres |
|-------------------------|----------------------|---|
| 1. Automobiles | Vehicle | 40 |
| 2. Fertilizers | Tonne | 80 - 200 |
| 3. Leather | Tonne (or 1000 kg) | 40 (or 4) |
| 4. Paper | Tonne | 200 - 400 |
| 5. Petroleum Refinery | Tonne (Crude) | 1 - 2 |
| 6. Sugar | Tonne (Crushed cane) | 1 - 2 |
| 7. Textile | Tonne (goods) | 80 - 140 |
| 8. Distillery (Alcohol) | kilo litre | 122 - 170 |

1.2.3 Institutional and Commercial Water demand

On an average, a per capita demand of 20 lpcd is usually considered to be enough to meet of such commercial and institutional water requirements although of course, this demand may be as high as 50 l/h/d for highly commercial cities.

The individual requirements would be as follows:

- | | |
|---|----------------------------------|
| 1. Schools/Colleges : 45 to 135 lpcd | 2. Offices : 45 lpcd |
| 3. Restaurants : 70 lpcd | 4. Cinema and theatres : 15 lpcd |
| 5. Hotels : 180 lpcd | |
| 6. Hospitals : 340 lpcd (when beds is less than 100), and 450 lpcd (when beds exceed 100) | |
| 7. Airports : 70 lpcd | |
| 8. Railway : 70 lpcd (for junction with bathing facility) | |

1.2.4 Demand for Public Uses

This includes water requirement for parks, gardening, washing of roads etc. A nominal amount, not exceeding 5% of the total consumption may be provided to meet this demand.

A figure of 10 lpcd is usually added on this account while computing total water requirements.

1.2.5 Fire Demand

The quantity of water required for extinguishing fire is not very large. For a total amount of water consumption for a city of 50 lakhs population, it hardly amounts to 1 lpcd of fire demand, but this water should be easily available and kept always stored in storage reservoirs, as quantity of water required is in very less duration.

In thickly populated and industrial areas, fire generally breakout and may lead to serious damages, if not controlled effectively. Big cities, therefore, generally maintain full fire fighting squads. Fire fighting personnel require sufficient quantity of water, so as to throw it over the fire at high speed. A provision should, therefore be made in modern public water scheme for fighting fire breakouts.

Following requirements must be met for the fire demand:

- The minimum water pressure available at fire hydrants should be of the order of 100 to 150 kN/m² (10 to 15 m of water head) and should be maintained for 4 to 5 hours of constant use of fire hydrant.
- Three jet streams are simultaneously thrown from each hydrants; one on the burning property and one each on the adjacent property on either side of the burning property. The discharge of each stream should be about 1100 l/min.

Calculation of Fire Demand:

- For cities having population exceeding 50,000, the water required in kilo litre may be computed using the relation. Kilo litre of water required = $100\sqrt{P}$, where P = Population in thousand

- **Kuchling's Formula** : It states that

$$Q = 3182\sqrt{P}$$

Q = Amount of water required in litre/minute

P = Population in thousands.

- **Freeman's Formula** : It states that

$$Q = 1136 \left[\frac{P}{5} + 10 \right]$$

- **National Board of Fire Underwriters Formula** :

(a) For Central congested high valued city

- (i) When population is less than or equal to 2 Lakhs $Q = 4637\sqrt{P} \left[1 - 0.01\sqrt{P} \right]$ in l/min.

- (ii) When population is more than 2 Lakhs, a provision for 54,000 litres/minute may be made with an extra additional provision of 9,100 to 36,400 litres/minute for a second fire.

(b) For a residential city

The required draft for fire-fighting may be as follows:

- (i) Small or low building = 2200 litres/minute
 - (ii) Larger or Higher building = 4,500 litres/minute
 - (iii) High values residency, apartments, tenements = 7650 to 13500 litres/minute
 - (iv) Three storeyed buildings in densely built up section = upto 27000 litres/minute
- **Buston's Formula** : It states that, $Q = 5663\sqrt{P}$



All the above formulas suffer from the drawback that they are not related to the type of district served and give equal results for industrial and non-industrial areas.



EXAMPLE : 1.1

Compute the 'fire demand' for a city of 2 lakh population by any two formulae (including that of the National Board of Fire Underwriters)

Solution:

- (i) The rate of fire demand as per National Board of Fire Underwriters Formula for a central congested city whose population is less than or equal to 2 Lakh is given by

$$Q = 4637\sqrt{P} [1 - 0.01\sqrt{P}] = 4637\sqrt{200} [1 - 0.01\sqrt{200}]$$

$$= 56303.08 \text{ l/min} = \frac{56303.08 \times 60 \times 24}{10^6} \text{MLD} = 81.08 \text{ MLD}$$

- (ii) Kuchling's formula, $Q = 3182\sqrt{P} = 3182\sqrt{200} \text{ l/min}$; $R = 45000.27 \text{ l/m} = 64.8 \text{ MLD}$

1.2.6 Water Required to Compensate Losses in Thefts and Wastes

This includes the water lost in leakage due to bad plumbing or damaged meters, stolen water due to unauthorised water connections, and other losses and wastes.

These losses should be taken into account while estimating the total requirements.

Even in the best managed water works, this amount may, be as high as 15% of the total consumption, which is nearly 55 lpcd.

Total Maximum Water Demand:

It is the sum of above six demands and IS code permits for India, a total maximum demand of 335 lpcd.

The Per Capita Demand (q):

It is the annual average amount of daily water required by one person and includes the domestic use, industrial use and commercial use, public use, waste thefts etc.

It may be, therefore expressed as Per Capita Demand (q) in litres per day per head

$$= \frac{\text{Total yearly water requirement of the city in litres (i.e V)}}{365 \times \text{Design Population}}$$

For an average Indian city, as per recommendation of I.S. code, the per capita demand (q) may be taken as (below table).

Table: Break up for per capita demand (q) for an average Indian City

| Use | Demand in lpcd |
|----------------------------|--|
| (i) Domestic Use | 200 (59.7% or 60%) |
| (ii) Industrial Use | 50 |
| (iii) Commercial Use | 20 |
| (iv) Civic or Public Use | 10 |
| (v) Waste and thefts, etc. | 55 |
| (vi) Fire demand | < 1 |
| | Total = 335 = Per Capita Demand (q) |

1.3 FACTORS AFFECTING PER CAPITA DEMAND

The annual average demand for water (i.e. per capita demand) considerably varies for different towns or cities. This figure generally ranges between 100 to 360 litres/capita/day for Indian conditions. The variations in total water consumption of different cities or towns depend upon various factors, which must be thoroughly studied and analysed before fixing the per capita demand for design purpose. These factors are discussed below:

1.3.1 Size of the City

The total water demand depends on size of population and for the design of water supply scheme for a given population size following guidelines may be adopted (below table).

Table: Variation in Per Capita Demand (q) with population in India

| S. No. | Population | Per Capita Demand in Liters/day/Person |
|--------|--------------------|--|
| 1. | Less than 20000 | 110 |
| 2. | 20000 - 50000 | 110 - 150 |
| 3. | 50000 - 2 Lakhs | 150 - 240 |
| 4. | 2 Lakhs - 5 Lakhs | 240 - 275 |
| 5. | 5 Lakhs - 10 Lakhs | 275 - 335 |
| 6. | Over 10 Lakhs | 335 - 360 |

1.3.2 Climatic Conditions

At hotter and dry places, the consumption of water is generally more, because more of bathing, clearing, air-coolers, air-conditioning etc. are involved. Similarly, in extremely cold countries, more water may be consumed, because the people may keep their taps open to avoid freezing of pipes and there may be more leakage from pipe joints since metals contract with cold.

1.3.3 Types of Gentry and Habits of People

Rich and upper class communities generally consume more water due to their affluent living standards.

1.3.4 Industrial and Commercial Activities

The pressure of industrial and commercial activities at a particular place increase the water consumption by large amount.

1.3.5 Quality of Water Supplies

If the quality and taste of the supplied water is good, it will be consumed more, because in that case, people will not use other sources such as private wells, hand pumps, etc. Similarly, certain industries such as boiler feeds, etc., which require standard quality waters will not develop their own supplies and will use public supplies, provided the supplied water is upto their required standards.

1.3.6 Pressure in the Distribution Systems

If the pressure in the distribution pipes is high and sufficient to make the water reach at 3rd or even 4th storage, water consumption shall be definitely more.

This water consumption increases because of two reasons:

- (i) People living in upper storage will use water freely as compared to the case when water is available scarcely to them.
- (ii) The losses and waste due to leakage are considerably increased if their pressure is high. For example, if the pressure increase from 20 m head of water (i.e. 200 kN/m²) to 30 m head of water (i.e. 300 kN/m²), the losses may go up by 20 to 30 percent.

1.3.7 Development of Sewerage Facilities

The water consumption will be more, if the city is provided with 'flush system' and shall be less if the old 'conservation system' of latrines is adopted.

1.3.8 System of Supply

Water may be supplied either continuously for all 24 hours of the day, or may be supplied only for peak period during morning and evening. The second system, i.e. intermittent supplies, may lead to some saving in water consumption due to losses occurring for lesser time and a more vigilant use of water by the consumers.

1.3.9 Cost of Water

If the water rates are high, lesser quantity may be consumed by the people. This may not lead to large savings as the affluent and rich people are little affected by such policies.

1.3.10 Policy of Metering and Method of Charging

When the supplies are metered, people use only that much of water as much is required by them. Although metered supplies are preferred because of lesser wastage, they generally lead to lesser water consumption by poor and low income group, leading to unhygienic conditions.

Factors Affecting Losses and Wastes: The various factors on which losses depend and the measure to control them are below:

- | | |
|------------------------------|--|
| (i) Water Tight Joints | (ii) Pressure in the Distribution system |
| (iii) System of supply | (iv) Metering |
| (v) Unauthorized connections | |

Variation in demand and effects on the design of various components of a water supply scheme

- The smaller the town, the more variable is the demand
- The shorter the period of draft, the greater is the departure from the mean

(i) **Maximum daily Consumption:** It is generally taken as 180 percent of the average

Therefore, Maximum daily demand = 1.8 (i.e. 180%) × Average daily demand = 1.8 q

(ii) **Maximum hourly Consumption :** It is generally taken as 150 percent of its average.

Therefore, Maximum hourly consumption of the maximum day i.e. peak demand

$$\begin{aligned}
 &= 1.5 \text{ (i.e. 150\%)} \times \text{Average hourly consumption of maximum daily demand} \\
 &= 1.5 \times \left(\frac{\text{Maximum daily demand}}{24} \right) = 1.5 \times \left(\frac{1.8 \times q}{24} \right) = 2.7 \left(\frac{q}{24} \right) \\
 &= 2.7 \text{ (Annual average hourly demand)}
 \end{aligned}$$

(iii) **Maximum Weekly Demand** : Maximum weekly Consumption = $1.48 \times \text{Average weekly}$

(iv) **Maximum Monthly Demand** : Maximum monthly consumption = $1.28 \times \text{Average monthly}$



Goodrich formula is used to compute maximum or peak demand.

$$P = 1.8(t)^{-0.1} \quad P = \frac{\text{Maximum demand}}{\text{Average demand}}$$

where, t = time in days, $t = 1$ for maximum daily, $t = \frac{1}{24}$ for maximum hourly

P = Annual average draft for time in t day

The GOI manual on water supply has recommended the following values of the peak factor, depending upon the population.

Table: Peak Factor

| S.No. | Population | Peak Factor |
|-------|---|-------------|
| 1. | Upto 50000 | 3.0 |
| | 50001 - 200000 | 2.5 |
| | Above 2 Lakh | 2 |
| 2. | For Rural water supply scheme, where supply is effected through stand post for only 6 hours | 3 |

Evidently, the peak factor tends to reduce with increasing population.



REMEMBER As far as the design of distribution system is concerned, it is hourly variation in computation that matters.

1.4 DESIGN PERIOD OF WATER SUPPLY UNIT

- A water supply scheme includes huge and costly structures (such as dams, reservoirs, treatment works, penstock pipes, etc.) which can not be replaced or increased in their capacities, easily and conveniently. For example, the water mains including the distributing pipes are laid underground, and cannot be replaced or added easily, without digging the roads or disrupting the traffic.
- In order to avoid these future complications of expansion, the various components of a water supply scheme are purposely made larger, so as to satisfy the community needs for a reasonable number of years to come.
- This future period or the number of years for which a provision is made in designing the capacities of the various components of the water supply scheme is known as design period.
- The design period should neither be too long nor should it be too short. The design period cannot exceed the useful life of the component structure, and is guided by the following considerations.

1.4.1 Factors Governing the Design Period

- Useful life of component structures and the chances of their becoming old and obsolete. Design period should not exceed there respective values.

- Ease and difficulty that is likely to be faced in expansions, if undertaken at future dates.
- Amount and availability of additional investment likely to be incurred for additional provision.
- The rate of interest on the borrowings and the additional money invested.
- Anticipated rate of population growth, including possible shifts in communities, industries and commercial establishment.

1.4.2 Design Period Values

Water supply projects, under normal circumstances, may be designed for a design period of 30 years excluding completion time of 2 years. The design period recommended by the GOI manual on water supply for designing the various components of a water supply projects are given below table:

Table: Design Period of Various Components of Water Supply Project

| S.No. | Units | Design (Parameters) Discharge | Design Period |
|-------|---|---|---------------|
| 1. | Water Treatment Unit | Maximum daily demand | 15 Years |
| 2. | Main supply pipes (Water mains) | Maximum daily demand | 30 Years |
| 3. | Wells and Tube wells | Maximum daily demand | 30-50 Years |
| 4. | Demand Reservoir (Overhead or ground level) | Average annual demand | 50 Years |
| 5. | Distribution system | Maximum hourly demand/ Coincident draft | 30 Years |

1.5 POPULATION FORECASTING

Population census enumerations and growth in population etc. are not only used in demographic sphere but also by Engineer and people concerned with economic growth, national planning and policy decision making in the sector of agriculture, growth in industries and infrastructure, drinking water supply schemes and other social welfare activities etc.

1.5.1 Population Growth

Growth of population is of great concern to people engaged in policy planning and decision making at the national level. Population growth means the change (increase) of population size between two dates. However, a population increasing in size is said to have a positive growth rate and the one declining is to have a negative growth rate.

The number of inhabitants of a country depends on (i) The rate of growth in population and (ii) Migrations. The second factor is of importance only in new countries and the old countries are the sources of migrants.

In order to predict the future population, as correctly as possible, it is necessary to know the factors affecting population growth. These are three main factors responsible for changes in population.

They are: (i) Births (ii) Deaths (iii) Migrations

All these factors are influenced by social and economic factors and conditions prevailing communities.

- The Birth rates may decrease due to excessive family planning practices and legalized abortions. Spread of education and development of extra recreational facilities for the people, also tend to reduce the birth rates.
- The death rates may decrease with the development and advancement of medical facilities, thereby controlling infant mortality rates and adult death rates due to control of infections and other diseases.

- The migrations are dependent upon the industrialization and commercialization of the particular cities or towns. People generally migrate from villages to cities where livelihood are available.
- Besides these three main factors, some other factors like war, natural havocs and disasters may also bring about sharp reduction in the population.
- Considering all these factors, arithmetic balancing is done to arrive at the future population. It can be expressed as $P_t = P_0 + (B - D) - (I - E)$

where, P_0 and P_t refer to the size of population at the beginning and end of a time period, and B, D, I and E refers to the number of births, deaths, immigration and emigration respectively during period under consideration.

1.5.2 Growth Rate Curve

When all the unpredictable factors such as war, or natural disasters do not produce sudden changes, the population would probably follow the growth curve as discussed in the theory of demographic transition. This curve is S-shaped as shown in figure and is known as “the logistic curve”. According to this curve, rate of growth of population varies from time to time.

The curve represents early growth AB at an increasing rate

(i.e. geometric or log growth, $\frac{dP}{dt} \propto P$)

and late growth DE at a decreasing rate

[i.e. first order $\frac{dP}{dt} \propto (P_s - P)$] as the saturation value (P_s) is approached. The

transitional [i.e. $\frac{dP}{dt} = \text{constant}$]. What

the future holds for a given population, depends upon, as to where the point lie on the growth curve at a given time.

- i.e.
- in $AB \rightarrow \frac{dP}{dt} \propto P \rightarrow$ increasing growth rate
 - in $BCD \rightarrow \frac{dP}{dt} = \text{Constant} \rightarrow$ High growth rate
 - in $DE \rightarrow \frac{dP}{dt} \propto (P_s - P) \rightarrow$ Decreasing growth rate, $P_s =$ Saturation value

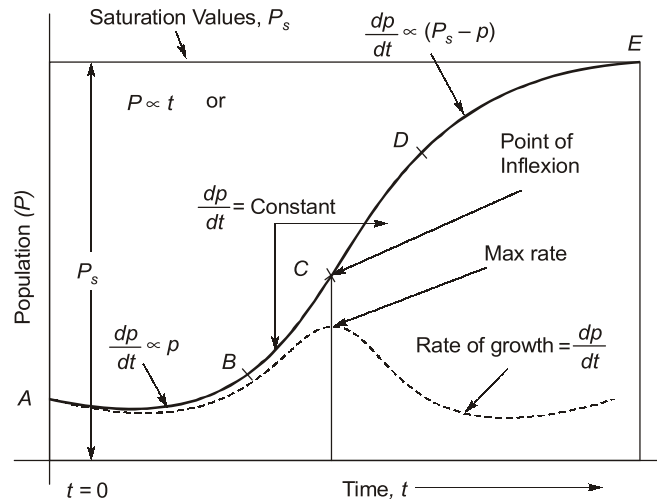


Fig. Growth Rate Curve

1.6 POPULATION FORECASTING METHODS

The various methods which are generally adopted for estimating future populations by engineers are described below. Some of these methods are used when design period is small, and some are used when the design period is large. The particular method to be adopted for a particular case or for a particular city depends largely upon the factor discussed in these methods and the selection is left to the discretion and intelligence of the designer.

1.6.1 Arithmetic Increase Method

In this method, a constant increment of growth in population is observed periodically. This method is of limited application, mostly used in large and established towns where future growth has been controlled.

This method is based upon the assumption that the population increase at a constant rate, i.e. the rate of change of population with time (i.e. $\frac{dP}{dt}$) is constant.

$$\text{Thus, } \frac{dP}{dt} = \text{Constant} = k \quad \text{or,} \quad dP = k \cdot dt$$

$$\text{or, } \int_{P_{t_1}}^{P_{t_2}} dP = k \int_{t_1}^{t_2} dt \quad P_{t_2} = P_{t_1} + k(t_2 - t_1)$$

Here P_{t_2} and P_{t_1} represent the population at time t_2 and t_1 respectively. This time period is usually reckoned in decades. k is the rate of increase of population per unit time (decade), thus $(t_2 - t_1) =$ Number of decades.

The equation can be rewritten as, $P_n = P_0 + n \cdot \bar{x}$

where P_n = perspective or forecasted population after n decades from the present (i.e. last known census)

P_0 = Population at present (i.e. last known census)

n = Number of decades between now and future

\bar{x} = Average (arithmetic mean) of population increase in the known decades.



EXAMPLE : 1.2

The population of 5 decades from 1930 to 1970 are given below in table. Find out the population after one, two and three decades beyond the last known decade, by using arithmetic increase method.

| Year | 1930 | 1940 | 1950 | 1960 | 1970 |
|------------|--------|--------|--------|--------|--------|
| Population | 25,000 | 28,000 | 34,000 | 42,000 | 47,000 |

Solution: The given data in above table is extended in table below, so as to compute the increase in population (x) for each decade (col. 3), the total increase, and average increase per decade (\bar{x}), as shown.

| Year (1) | Population (2) | Increase in population (x) (3) |
|--|-------------------|--|
| 1930 | 25,000 | 3000 |
| 1940 | 28,000 | 6000 |
| 1950 | 34,000 | 8000 |
| 1960 | 42,000 | 5000 |
| 1970 | 47,000 | |
| Total | | 22,000 |
| Average increase per decade (\bar{x}) | | $\bar{x} = \frac{22000}{4} = 5,500$ |

\therefore (a) Population after 1 decade beyond 1970

$$= P_{1980} = P_1 = P_{1970} + 1 \cdot \bar{x} = 47,000 + 1 \times 5500 = 52,500$$

(b) Population after 2 decades beyond 1970

$$= P_{1990} = P_2 = P_{1970} + 2 \cdot \bar{x} = 47,000 + 2 \times 5500 = 58,000$$

(c) Population after 3 decades beyond 1970

$$= P_{2000} = P_3 = P_{1970} + 3 \cdot \bar{x} = 47,000 + 3 \times 5500 = \mathbf{63,500}$$

1.6.2 Geometric Increase Method

The method of Geometric progression is applicable to the cities with unlimited scope for future expansion and where a constant rate of growth is anticipated.

The basic difference between arithmetic and geometric progression or increase method of population forecasting is that, in Arithmetic method no compounding is done whereas, in Geometric method compounding is done every decade. This method is, therefore, also known as uniform increase method.

In Geometric increase method, a constant value of percentage growth rate per decade (k) analogues to the rate of compounding interest per annual.

Thus, population after one decade can be given by, $P_1 = P_0 + kP_0 = P_0 (1 + k)$

Similarly, population after n decades
$$P_n = P_0 (1 + k)^n = P_0 \left(1 + \frac{k}{100}\right)^n$$

Where, P_0 refers to initial population i.e. at the end of last known census.

Average percentage growth rate per decade k to be used in the above equation is computed from the percentage growth rate of each decade. The value of k can be calculated as $k = \sqrt[n]{k_1 \cdot k_2 \cdot k_3 \cdots k_m}$

In geometric increase method the growth rate per decade, $k = \sqrt[n]{\frac{P_2}{P_1}} - 1$



EXAMPLE : 1.3

Determine the future population of a satellite town by the Geometric increase method for the year 2011, given the following data.

| Year | 1951 | 1961 | 1971 | 1981 | | 2011 |
|------------------------|------|------|------|------|-------|------|
| Population in Thousand | 93 | 111 | 132 | 161 | | ? |

Solution: The given data is analysed in table to determine growth rates for each decade.

| Year | Population in thousand | Increase in Population in thousand | %age increase in population = growth rate = $\frac{\text{col(3)}}{\text{col(2)}} \times 100$ |
|------|------------------------|------------------------------------|---|
| 1951 | 93 | 18 | 19.35 |
| 1961 | 111 | 21 | 18.92 |
| 1971 | 132 | 29 | 21.97 |
| 1981 | 161 | | |

Constant growth rate, assumed for future